


Peripheral Camera , (KA4),(KA6)

From June 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

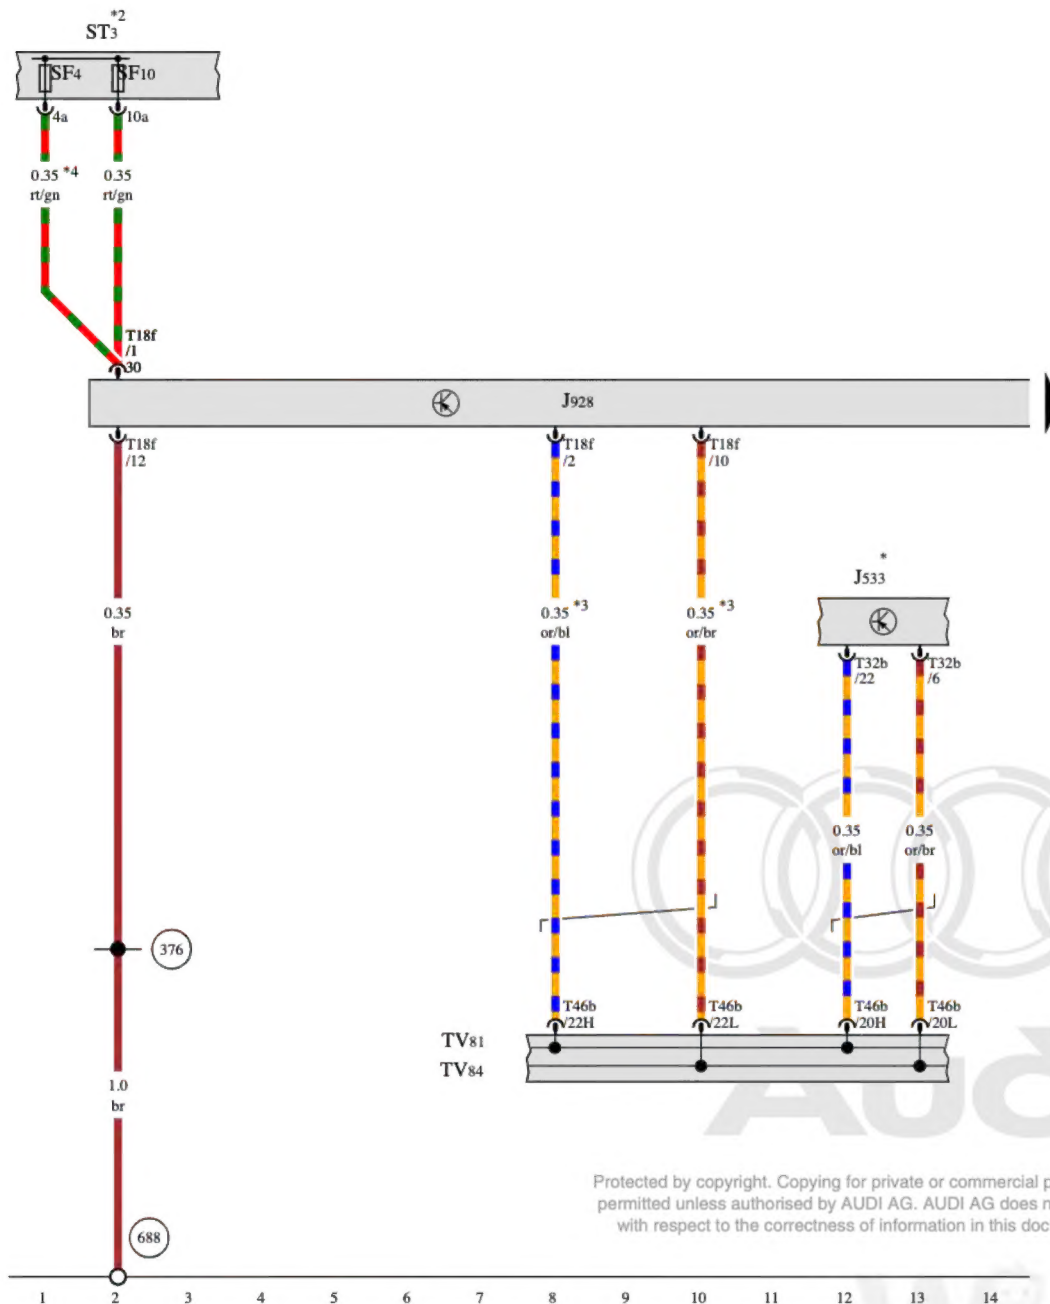

Peripheral Camera Control Module

- J533 Data Bus on Board Diagnostic Interface
- J928 Peripheral Camera Control Module
- ST3 Fuse Panel 3
- SF4 Fuse 4 (On Fuse Panel F)
- SF10 Fuse 10 (On Fuse Panel F)
- T18f 18-Pin Connector
- T32b 32-Pin Connector
- T46b 46-Pin Connector
- TV81 Instrument Cluster CAN Bus High Wire Junction 2
- TV84 Instrument Cluster CAN Bus Low Wire Junction 2

376 Ground Connection 11 (in Main Wiring Harness)


688 Ground Connection 2 on Center Tunnel

- * Refer to Applicable Wiring Diagram for Data Bus Networking
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 Data Bus Wire (CAN Bus)
- *4 From June 2014

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright © AUDI AG.


Peripheral Camera Control Module

- J794 Information Electronics Control Module 1
- J928 Peripheral Camera Control Module
- T2lt 2-Pin Connector
- T12c 12-Pin Connector
- T12g 12-Pin Connector
- * Refer to Applicable MMI (Information Electronics) Wiring Diagram
- *2 For Vehicles with RMC Radio System

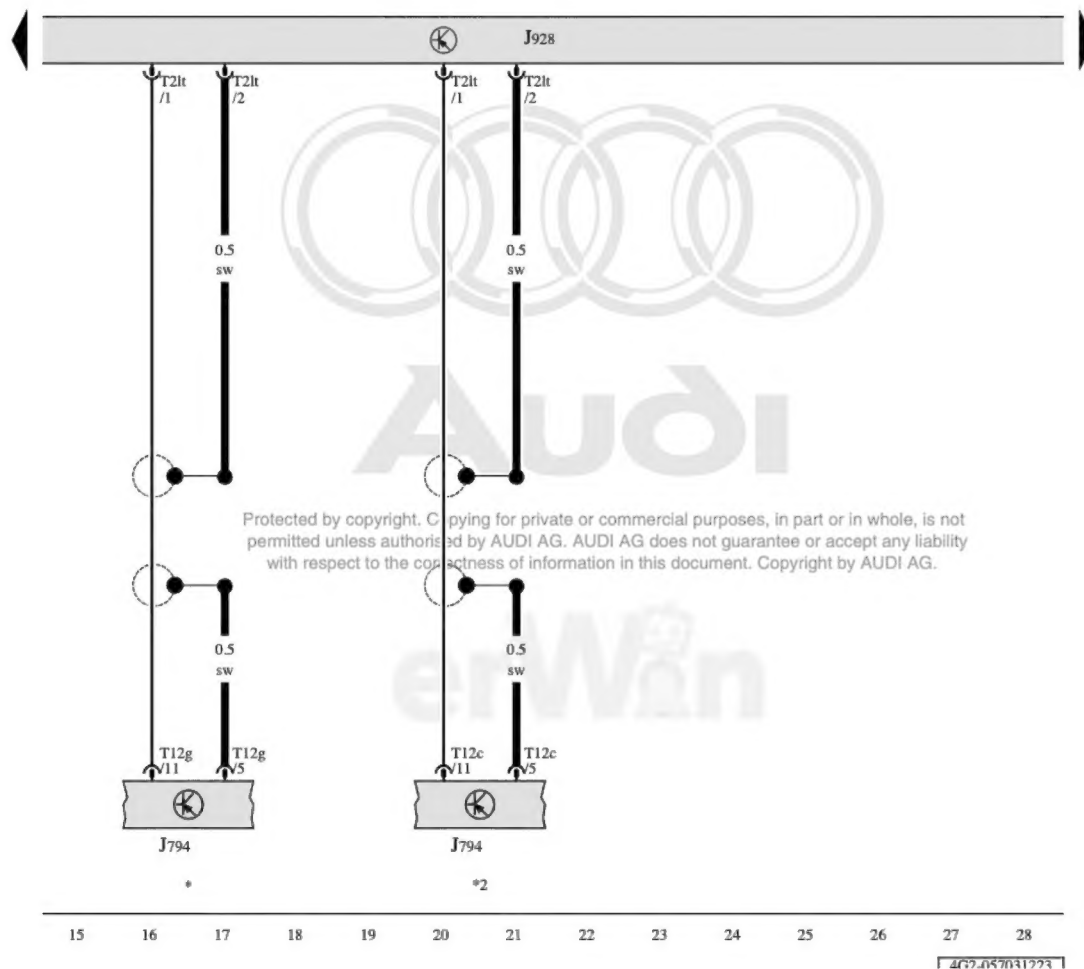

Peripheral Camera Control Module, Left Peripheral Camera, Right Peripheral Camera


- J928 Peripheral Camera Control Module
- R244 Left Peripheral Camera
- R245 Right Peripheral Camera
- T5an 5-Pin Connector, In the Driver Door
- T5ap 5-Pin Connector, In the Front Passenger Door
- T5aq 5-Pin Connector, On the Right A-Pillar
- T5ar 5-Pin Connector
- T5as 5-Pin Connector
- T5av 5-Pin Connector
- T5aw 5-Pin Connector
- T5bt 5-Pin Connector, On the Left A-Pillar
- * Depending on Equipment

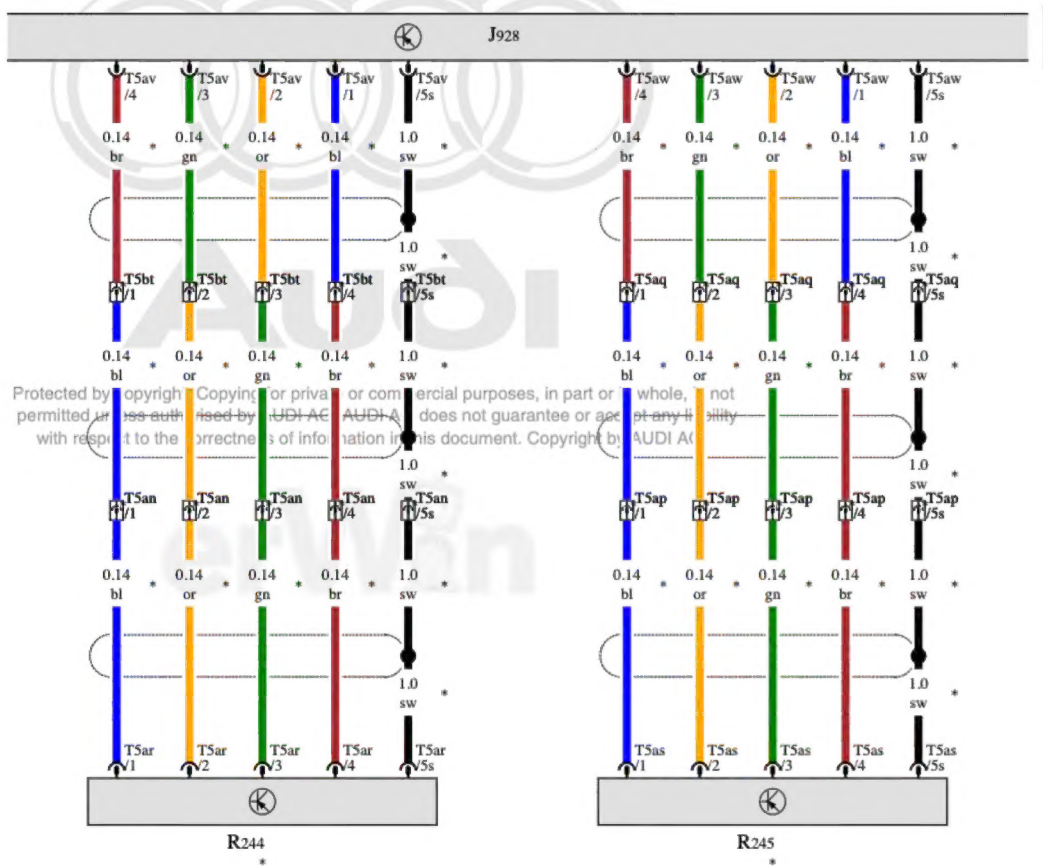

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Peripheral Camera Control Module, Front Peripheral Camera, Rear Peripheral Camera

- J928 Peripheral Camera Control Module
- R243 Front Peripheral Camera
- R246 Rear Peripheral Camera
- T5at 5-Pin Connector
- T5au 5-Pin Connector
- T5ax 5-Pin Connector
- T5ay 5-Pin Connector
- T5az 5-Pin Connector, In the Front Bumper, Left

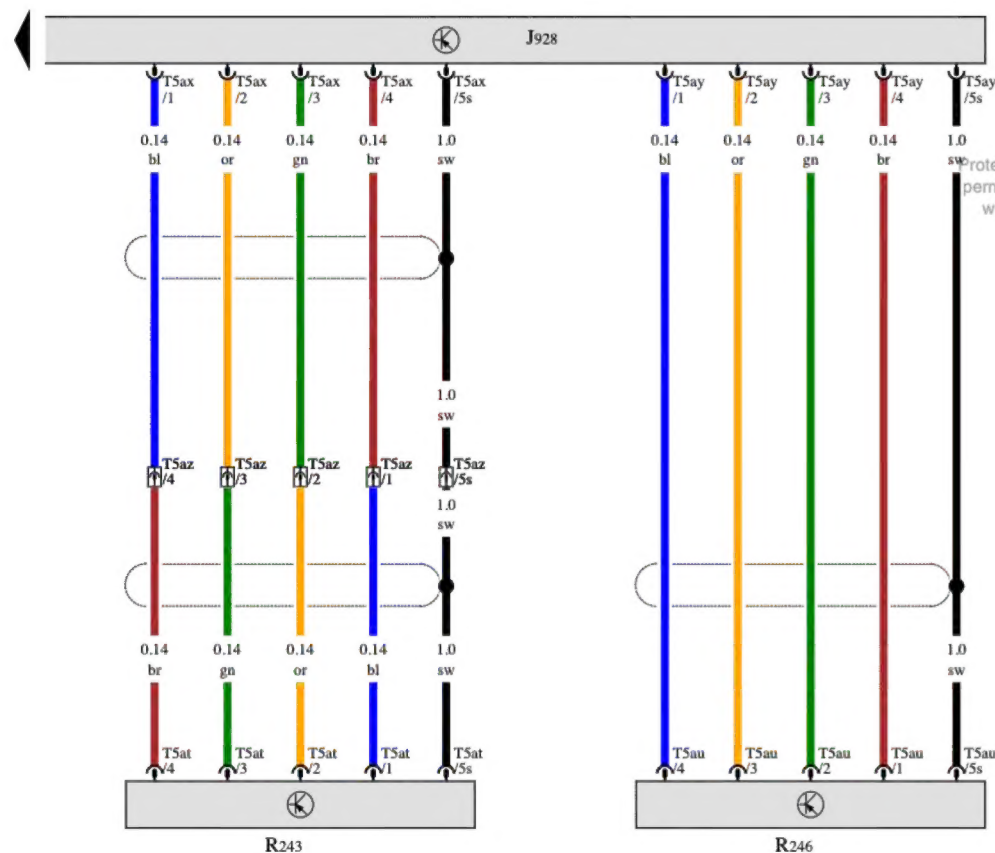

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.